○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。
 ○保管場所は直射日光の当たらない風通しの良い場所を選んでください。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買 い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの
 ○間違ったお手入れ、保管方法、経年変化による素材劣化
 ○乱暴な取り扱いによるもの
 ○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

■ 仕様

- 品 番:1129601
- 品 名:コンパクトスノースパイク
- **サ イ ズ**:対応靴幅78mm 爪の長さ20mm
- **素 材**:(アイゼン本体)S55C鋼
 - (バンド)エラストマー
- **対応靴サイズ**:フリーサイズ(21.5~30.0cm) ※靴の形状によっては対応サイズでも装着できない場合があります。

mont·bell _{取扱説明書}

コンパクトスノースパイク Compact Snow Spike

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本 製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法を ご確認ください。

ただし、本説明書は本製品の基本的な使用方法を示すものであり登山の安全システムを解説するものでは ありません。安全な条件のもとで十分な練習を行い、正しい使用方法を習得してください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせくだ さい。本説明書は大切に保管してください。

■ 特長

本製品は軽アイゼンとして夏の雪渓や、冬の低山歩行用として設計されており、十分な強度と快適な装着感、さらに雪が団子状に付着しにくいアンチスノープレートを特長としています。

■ 各部の名称



■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社 モンペル 本 社 〒550-0013 大阪市西区新町2-2-2 Tel. 06-6531-3544 フリーコール: ⑥ 0088-22-0031 商品についてのお問い合わせはカスタマー・サービスまで モンベルホームページ http://www.montbell.jp ■ 安全上の注意 びずお読みください

1. 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

○登山は常に潜在的な危険をはらんでいます。たとえ用具の正しい選択、使用、お手入れ、保管を行なっていても傷害や死亡事故などに至る危険性を完全に排除することは出来ません。個人の責任において登山を行なってください。(株) モンベルでは本製品の誤った使用に起因する損害や傷害、死亡事故に対していかなる責任をも負いません。

○本製品は簡易アイゼンです。本格的な雪山登山には使用しないでください。

○本製品は登山専用のアイゼンです。その他の用途には使用しないでください。

4

り仕様、ナサ1.

登客告 場合により人が死亡または重傷を負う可能性が想定される内容です。 軽傷または物的損害が発生する頻度が高いことが想定される内容です。

○本製品に対応する靴のサイズでご使用ください。対応サイズ外の場合は本来の性能が発揮できない恐れがあります。

- ○使用方法をご覧のうえ、靴に合わせてサイズを正しく調節してください。正しく調節しないと本来の性能 が発揮できない恐れがあります。
- ○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に保護能力が発揮できない 恐れがあります。
- ○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合には直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- ○アイゼンの底についた雪や雪の固まりは常に取り除いてください。放置すると爪が効かず、本来の制動 力を発揮できない恐れがあります。
- ○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を 発揮できない恐れがあります。

/ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- ○携行する際は左右のアイゼンの爪を内側に重ね、付属の収納袋に入れてください。
- ○アイゼンを使用する際は十分に歩行練習などを行ってください。アイゼンを装着していないときに比べ爪を引っ掛けて転倒する可能性が高くなります。
- ○本製品は氷雪上の滑り止め用具です。氷雪以外で使用すると爪が折れ曲がったり、アンチスノープレートが傷ついたり破損することがあります。
- ○バンドは素材の性質上、始めは伸びが少ない場合があります。ご使用前に引っ張って伸ばす事で、若干 伸びやすくなります。

■ 使用方法

本製品の性能を十分に発揮させるために、使用者の靴にしっかり合うようにサイズ調節を行ってください。不適 切なサイズ調節や、装着ではアイゼンが靴から外れたりして危険です。サイズ調節は必ずフィールドに行く前に 行ってください。

○ 対応靴サイズ フリーサイズ(21.5~30.0cm) ※靴の形状によっては対応サイズでも装着できない場合があります。

(図b)

○ 装着方法

※図は右足です。

※取り外す際は、装着方法と逆の順序で取り外してください。

本製品は左右があります。

- ①装着するときは靴底の雪や土を、よく (図a) っま先側 取り除いてください。
- ②(図a)のようにアイゼンを地面(雪面) に置き、靴の土踏まずが合うように乗 せてください。アイゼンはバンドのバッ クルが固定されている方が足の内側 です。

●装着具合が緩かったり、きつかったりす る場合は、バンドのバックルで調節して ください。調節後の末端は必ず(図c) のようにしてください。

- ③取り外す時は、装着の逆順で作業して ください。
- ※現場で使用する前に取扱説明書なしで 手早く着脱できるよう練習してください。※取り付け後はバンドの締め具合は調 節できません。あらかじめ調節してくだ さい。



I Supply



■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。



○ご使用後は水洗いをして泥などを落とし、乾燥させて、金属部分に市販の防錆油等を塗布してください。
 ○バンドやバックルなどにキズや破損等がないかを確認してください。

○アイゼンの爪が摩耗しているときは金工ヤスリ等で削ってください。

○バンドが破損しているときは、別売のバンドと交換してください。

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#: 1129601 Name: Compact Snow Spike Size: Maximum width 78mm, Teeth 20mm Materials: (Crampon) Carbon steel (Band) Elastomer One size fits most (21.5 - 30cm) *Shoes may not fit due to shape, even if within size range.

mont.bell

User's Manual

Compact Snow Spike

Compact Snow Spike

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

However, the information in this User's Manual only covers the basic use of these crampons and does NOT cover outdoor safety. We recommend practicing the use of these crampons under safe and controlled conditions.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Perfect for travel over unmelted snow in high elevations in summer or small mountains and hillwalking in winter, these micro crampons are extremely compact and can be put on guickly. 8 points provide good gripping ability laterally and horizontally.

Components



Safety Warnings! Please read carefully.

DANGER! WARNING! Under certain conditions, use of this product can result in major injury or death.

OMountaineering and rock climbing are inherently dangerous activities. Even if these crampons are used, cared for, and stored correctly, it will not completely eliminate the risk of major injury or death. You are responsible for your own actions and decisions. Montbell Co. LTD is not liable for damages or accidents resulting in injury or death resulting from improper usage.

Othis product is a micro crampon. It is NOT designed for use in alpine conditions.

These micro crampons are NOT designed for any other purpose than for trekking and hiking.

All product specifications and design are subject to change without prior notice. Actual product specifications may vary

mont-bell Co..Ltd. 2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN www.montbell.com 4

44-2495-1802

WARNINGS! Under certain conditions, use of this product can result in injury, death, or property damage.

- OMake sure this product is correctly sized to match your shoes. This product will not perform as intended if not sized correctly.
- OFollow the instructions for correct fitting. This product will not perform as intended if not fitted correctly.
- ODo NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- ○Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- ORoutinely clear snow from the crampons. Accumulated snow can prevent the crampon's points from performing as intended.
- OPlease follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

Under certain conditions, use of this product can result in injury or property damage.

 \bigcirc For transporting, use the included stuff sack and stack the crampons so the points face each other.

- ○Please practice walking while wearing crampons. The crampon's points can make it difficult to walk, increasing the chances of tripping or falling.
- ○This crampon is meant for use on ice and snow. The points can bend or break and the anti-snow plates can become damaged when used on surfaces without ice or snow.
- ○This product may not stretch at first due to the rubber's properties. Pulling the rubber will help it stretch.

Prior to use, inspect this product for:

Whether or not there is damage or deforming on the points or anti-snow plates.

Damage to the band.

If the buckle is working properly

Directions

In order for these crampons to perform as intended, they must be correctly sized to your shoes. If not sized or fitted correctly to the shoes, there is a possibility the crampons can become loose and separate from your shoes during use. Perform sizing and fitting adjustments before use.

\bigcirc Shoe size compatibility

One size fits most (21.5 - 30cm)

*Shoes may not fit due to shape, even if within size range.

O Putting on

※Illustration shows right shoe.

%To take crampons off, follow the procedures below in reverse.

Match crampons to left and right shoes.

- Before putting on, clear off any snow or dirt on the bottom of the sole.
- Lay the crampon down in the snow or ground (see Fig. a) and fit your shoe's arch over the crampon. Make sure the point where the bands are attached to the crampon is on the inside.
- Take both rubber bands and pull them around the shoe, attaching the hook to the crampon.
- If fit is loose or tight, adjust length of rubber bands using the buckles. After adjusting length, make sure that at least 20mm of rubber band exits the buckle.
- **G**To take crampons off, follow the previous steps in reverse.
- *Practice before hand so that you are able to take off and put on the crampons without this manual.
- *Fit CANNOT be adjusted after attaching to shoes. Remove from shoes and adjust again.



e-Buckle



Care

Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.

(Fig.b)

- OWash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool, well ventilated area before applying a corrosion inhibitor.
- Ocheck for damage to the bands and buckles.
- OWhen points have become worn, use a file to sharpen.

OReplace bands if they become worn or break.

Storage

- OTo prevent deforming and damage, do NOT store near heat sources.
- Owhen storing for an extended period of time, store in a well ventilated, cool, dry place out of direct sunlight.

Disposal

OPlease follow local regulations regarding waste disposal.