

mont·bell

共通取扱説明書

Tグリップ カムロック シリーズ


T Grip Cam Lock Series

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。
なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品は、T型グリップを採用した、トレッキングなどに適したポールです。持ちやすいグリップにより、軽快な歩行を実現します。簡単に長さの調節が行えるカムロックシステムを備え、スピーディーに組み立てと収納が行えます。

■ 各部の名称

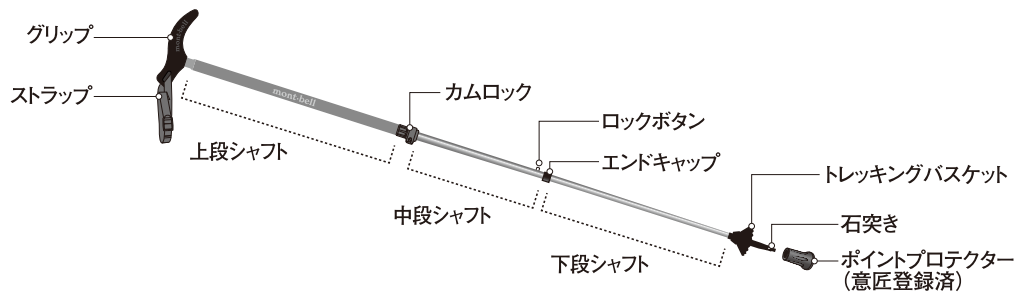

■ 安全上の注意 必ずお読みください

- 警告** 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。
- 本製品は登山用です。これ以外の目的では使用しないでください。
 - 登山用ピッケルではありません。グリセードやクライミングの支点として、絶対に使用しないでください。また、両端を強い力で引っ張るとグリップやシャフトが抜けてしまう可能性があります。人や荷物の引き上げに使用しないでください。
 - 岩場など手を使って確保が必要な場所では、バックパックに収納するなどして使用しないでください。
 - 落雷の恐れがあるときは使用しないでください。
 - 使用時にシャフトの固定が不十分だと転倒などの原因となり危険です。使用前には必ず固定状態を確認してください。行動中にも緩みがないかを確認してください。
 - 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に保護能力が発揮できない恐れがあります。
 - 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
 - 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能が発揮できない恐れがあります。

1

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 周囲の人や物に危害を加える恐れがありますので、使用中は振り回さないでください。
- “STOP”表示を超えて使用しないでください。使用中に破損する恐れがあります。
- シャフトに潤滑油等を使用しないでください。確実な固定が得られず、転倒などの原因となり危険です。
- 横からの強い荷重をかけないでください。構造上、横方向からの荷重には縦方向ほどの強度はありません。
- 使用しないときは、石突きに必ず付属のポイントプロテクターを装着してください。
- 収納時はシャフトが脱落することがありますのでバックパックや収納ケース等に収納してください。
- ポールに全体重をかけないでください。ケガやポールが破損する恐れがあります。
- お子さまや、ご年配の方が使用する際は、周囲の人がシャフトが固定されていることを確認してください。
- 先端のポイントプロテクターがすり減った場合は速やかに専用のポイントプロテクターに交換してください。
- 高温になる場所に放置しないでください。グリップが変形したり、やけどをする恐れがあります。
- 極度の低温下ではシャフトが凍ったり、各部の機能が低下することがあります。
- グリップは素材の特性上、保水して凍ったり、雪が付着することがあります。凍る可能性のある状況での使用はお避けください。


■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。

- ☐ ひびや変形が見られないか ☐ シャフトの固定は確実にできるか

■ 使用方法

コースや地形に応じてポールの長さ、ストラップの長さを適切に調節してください。

○ 長さの調節の目安（使用する状況に応じて長さを調節してください。）

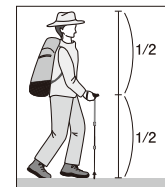

平坦地
身長を半分の目安にポールの長さを調節してください。




登り
体の前に楽に突けるように短めに調節してください。



下り
体に負担をかけない直立姿勢を維持するため、長めに調節します。

○ 長さの調節方法


本製品はカムロックの固定を解除し、中段シャフトを伸ばして長さを調節します。下段シャフトは全て引き伸ばすと決まった位置で自動でロックされます。

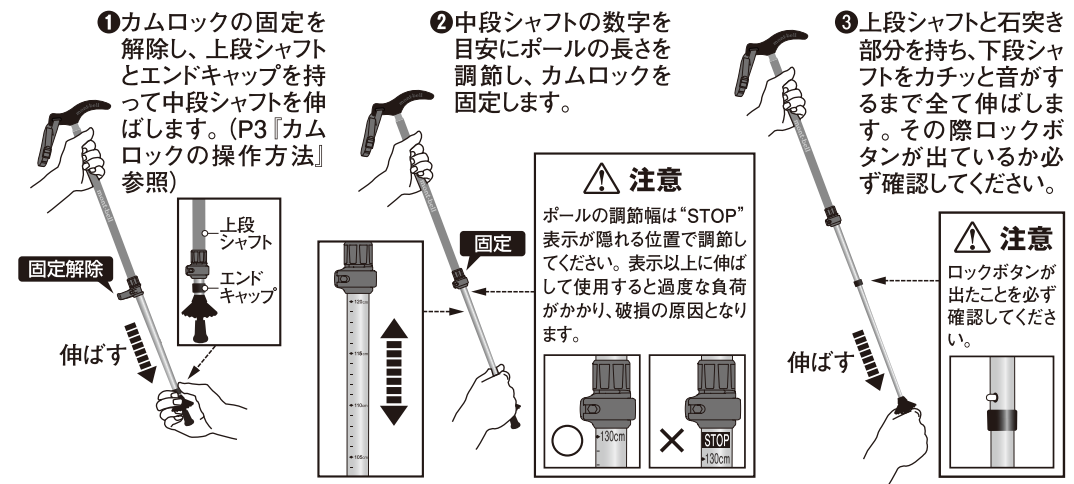

2


カムロックの操作方法

固定解除

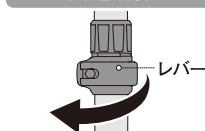


レバーを矢印の方向に起こして固定を解除します。

固定

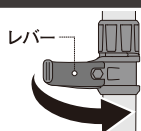

レバーを矢印の方向に倒して固定します。

■カムロック・システムの固定力の調節

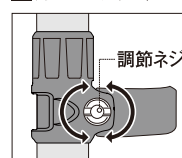

※ご使用前に上から荷重をかけて、必ずロック状態を確認してください。また、行動中も緩みがないかを確認してください。

- ① 固定を解除します。
- ② 調節ネジをコインなどで時計回りに回すことでシャフトを固定する力が強くなります。
- ③ 調節ネジを反時計回りに回すことでシャフトを固定する力が弱くなります。

○ 収納方法

- ① カムロックの固定を解除し、上段シャフトと石突き部分を持ちます。



固定解除

- ② 矢印の方向に力を加えて収納します。この時ロックボタンは自動で解除される為、指で押さえる必要はありません。



縮める

- ③ カムロックを固定します。緩めたままだとシャフトが脱落する恐れがあります。



固定

注意
指を挟まないよう必ず上段シャフトと石突き部分(バスケットの下)を持ってください。

○ グリップの握り方とストラップの調節方法

- ① 下方向からストラップに手を通します。




- ② ストラップとグリップを図のように握ります。



ストラップの長さの調節

短くする時
テープを引くことで短くなります。



長くする時
バックルを起こすとストラップが開放され、長さの調節ができます。



○ 万が一ロックボタンが出ない、または下段シャフトが脱落した場合


ロックボタンが出ない場合は、下段シャフトを中段シャフトから引き抜き、手順①から行ってください。

- ① ロックボタンと穴の位置を合わせます。




中段シャフト

下段シャフト

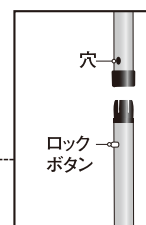

- ② ロックボタンを押さえながら、下段シャフトを中段シャフトに押し込みます。指を挟まないよう注意してください。



押す



注意
ロックボタンが出たことを必ず確認してください。

○ バスケットの着脱方法

岩の割れ目などにポールが挟まる危険を防ぐ樹脂製バスケットです。安全確保のため、バスケットは必ず装着して使用してください。また、深雪ではスノーバスケット(別売)を使用してください。


※バスケットの着脱は、必ずロックボタンが出ている状態で行ってください。ロックボタンが出ていない状態で強い力でバスケットを回すと、ロックボタンが出なくなる恐れがあります。



注意
ロックボタンが出たことを必ず確認してください。


■取り付け方

バスケットを矢印の方向に回しながら、空回りするまで差し込みます。

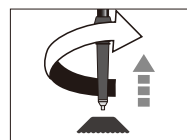


■取り外し方

バスケットを下方向に引きながら矢印の方向に回し、引き抜きます。

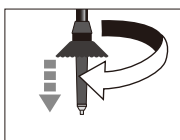

○ ポイントプロテクター

独自構造の脱着しにくいラバー製キャップです。移動時や植生にダメージを与える可能性のある登山道や木道では必ず装着して使用してください。また、雪上では取り外して使用してください。※ポイントプロテクターは消耗品です。傷んだ際は交換してください。



■取り付け方

カチッと音がするまで、ボールの石突きにしっかり差し込んでください。奥まで入れないと脱落する恐れがあります。

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- ご使用後は汚れをよく落としてください。
- 上段シャフトを外し、中段・下段シャフトはイラストのように伸ばした状態で完全に乾燥させて保管してください。
- シャフトに潤滑油等を使用しないでください。確実な固定が得られず、転倒などの原因となり危険です。



上段シャフト

中段・下段シャフト

■ 保管方法

- 本製品を長期間使用せずに保管する場合は、直射日光の当たらない風通しの良い場所に保管してください。
- 火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

- 廃棄方法はお客様の自治体の収集方法に従ってください。

■ アフターサービス

お問い合わせいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お問い合わせいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ オプション(別売) 本製品は下記の別売のオプションを利用することができます。

- **トレッキングバスケット**
破損、紛失時の交換用のバスケットです。
- **ポイントプロテクター**
消耗した際の交換用のキャップです。
- **ポイントプロテクター ウォーキング**
推進力を高める形状をしたラバー製キャップです。
- **スノーバスケット**
積雪期の歩行に適した交換用バスケットです。

■ 仕様・サイズ

品番: 1140262	品名: Tグリップ カムロック	使用長: 80~100cm
品番: 1140263	品名: Tグリップ カムロック S	使用長: 70~90cm
素材: (シャフト) アルミニウム合金 (グリップ) エラストマー (ストラップ) ナイロン		

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont-bell

User's Manual

T Grip Cam Lock

T Grip Cam Lock Series


Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Features an easy-to-hold T shaped grip to enhance comfort while walking and trekking. Length of the pole is easily adjusted with the lever lock, and a ratchet-lock system allows for quick assembly and storage.

Parts

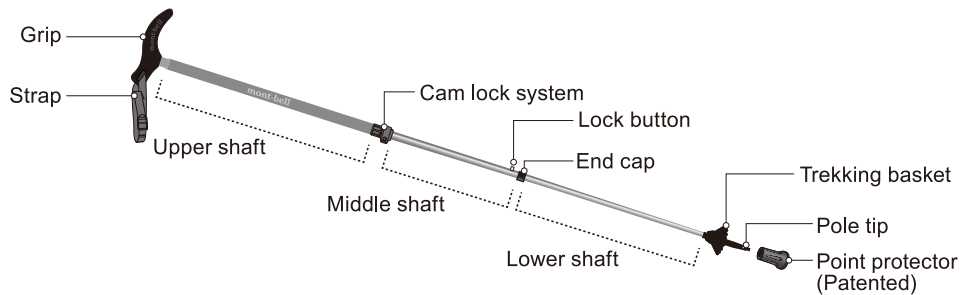

Safety Warnings! Please read carefully.

WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.

- For hiking and trekking use only.
- Do NOT use as an ice axe, for glissading or as an anchor for climbing. Do NOT pull strongly on both ends of the pole as the shaft or grip can come apart. Do NOT use the pole for pulling up people or luggage.
- In rocky terrain where climbing is necessary, store poles in your backpack to free up your hands.
- Do NOT use if there is a chance of lightning.
- If the shaft is not properly secured, the shaft can come apart or slide closed during use and result in a falling accident. Prior to use, check to see if the shafts are properly locked in place and periodically check for loosening.
- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair function.
- Prior to use, check the product's condition and stop using immediately if you notice any damage or irregularities.
- Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.

CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- Do NOT swing or wave poles around. May result in injury and property damage.
- Do NOT extend pole shafts further than the "STOP" marking. This may damage the stopper during use.
- Do NOT apply lubricants to the shaft. Lubrication prevents the shaft from locking properly and may result in a falling accident.
- Do NOT apply a strong horizontal force to the pole. Poles are not designed to support lateral forces.
- Attach the point protector when pole is not in use.
- When not in use, store the pole inside a stuff sack or backpack. Loose shafts can become dislodged and fall.
- Never place your full weight onto the pole.
- If someone in your party, such as a child, cannot check if the shaft is stable have someone in the group help check the pole is safe to use.
- Replace the point protector if it shows signs of heavy wear.
- Exposure to heat can cause the grip to deform and metal to become hot.
- Exposure to freezing temperatures can freeze the shaft and impair performance.
- During cold weather, snow can stick to the grip, which may absorb moisture and freeze. Not recommended for use in freezing temperatures.


Prior to use, inspect this product for: Stop using immediately if you notice any irregularities.

- ☐ Cracks, damage or other irregularities
- ☐ Securely locking shafts

Directions

*Adjust pole length and strap length based on trail conditions and terrain for improved comfort while trekking.

Optimizing pole length

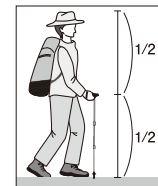

Level Terrain
Adjust the length of the pole so that it is roughly half your height.




Ascending
Shorten the pole to make it easier to place the pole in front of you.



Descending
Lengthen the pole to make it easier to place in front of you.


Adjusting pole length

Length adjustments are made using the upper shaft's cam lock system. The lower shaft locks into place automatically when fully extended.

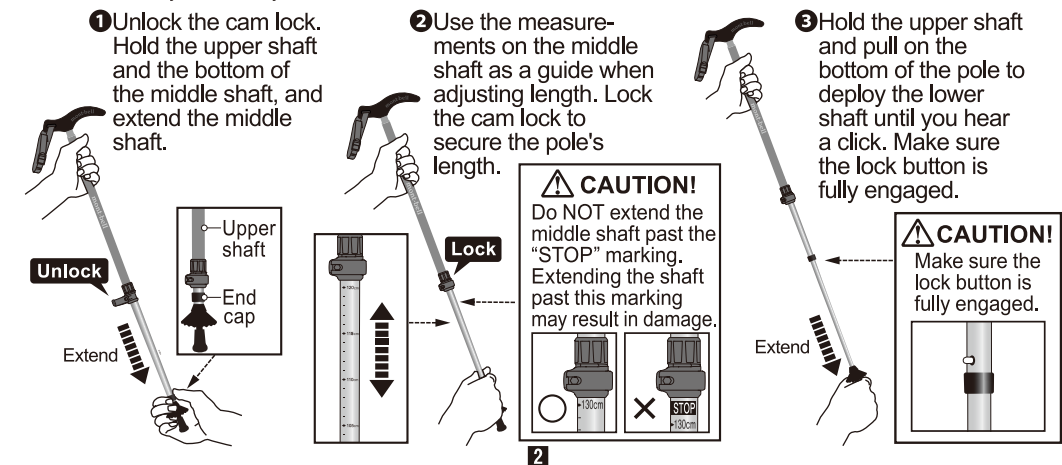


Cam lock system

Unlock

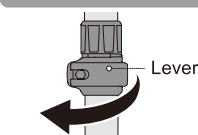


Lift the lever to unlock.

Lock

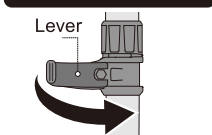

Close the lever to lock.

Tightening and loosening the Cam lock system

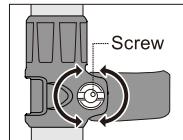

- 1 Lift the lever to unlock.
- 2 Turn the screw clockwise to tighten.
- 3 Turn the screw counterclockwise to loosen.

※Before and during use, make sure the pole is securely locked.

Storing

- 1 Unlock the cam lock, and hold the upper shaft and pole tip.



- 2 Push in the directions shown to collapse. Lock button will automatically be released. No need to hold it.

CAUTION!
Make sure to hold the upper shaft and pole tip, under the basket, to avoid pinching your fingers.



- 3 Lock the cam lock. If the cam lock is loose, the lower shafts can potentially fall out of the upper shaft.



Holding the grip and adjusting strap length

- 1 Put your hand through the bottom of the strap.




- 2 Hold the strap and the grip as in the illustration below.




Adjusting strap length

To shorten
Pull strap.

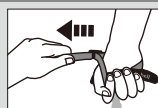


To lengthen
Lift the buckle to release the strap and adjust accordingly.

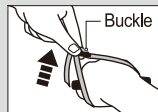


In case the lock button doesn't engage or the lower shaft comes out of the middle shaft.

If the lock button doesn't engage, pull the lower shaft out of the middle shaft and follow the instructions below.


- 1 Align the lock button with the lock hole.

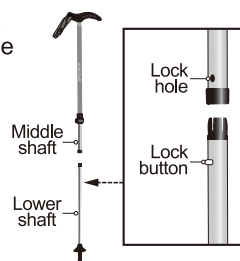

- 2 While holding the lock button, push the lower shaft back up into the middle shaft. Be careful not to pinch your fingers or hands.

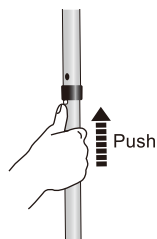

CAUTION!
Make sure the lock button is fully engaged.

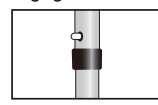


Attaching the basket

The plastic trekking basket prevents the pole from getting caught in places like cracks in the rock. For safety reasons, always attach the basket before use. In deep snow, use the Snow Basket (sold separately).

*When switching basket attachments, make sure the lock button is fully engaged. If the lock button isn't fully engaged, there is a possibility it will shift positions inside the shaft.


CAUTION!

Make sure the lock button is fully engaged.

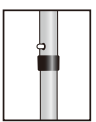


Attachment

Twist the basket in the direction of the arrow until it secures into place.

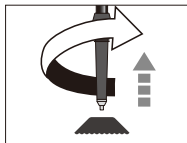

Removal

While pulling downward, twist the basket in the direction of the arrow.

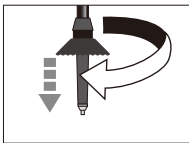


Point protector

The point protector is Montbell's original design and features a piece of rubber that helps prevent the protector from coming off. We recommend using the point protector when the poles are not in use or when there could be plants easily damaged on a trail. Remove before using on snow.
*Point protectors will wear out and eventually need to be replaced.

Attachment

Twist the point protector onto the pole's tip until it clicks into place. If not properly attached, point protector may become dislodged and fall off.

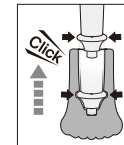

Care

- After use, wipe off any dirt or residue.
- Pull apart the upper shaft and extend the lower sections of pole, as shown in the illustration, to dry completely before storing.
- Do NOT apply lubricants to the product. Lubrication prevents the pole from locking properly and may result in injury.



Storage

- Store in a well-ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light.
- Do NOT store near heat sources or in places subject to temperature extremes. May result in deformation or damage.

Disposal

- Please follow local regulations regarding waste disposal.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Accessories (Sold separately)

The following accessories are available for use with this product.

- **Trekking Basket**
Replacement basket
- **Point Protector Walking**
Protector with excellent gripping abilities
- **Point Protector**
Replacement protector
- **Snow Basket**
Basket for trekking in snow

Specifications

Style# : 1140262 Name : T Grip Cam Lock

Usable length : 80~100cm

Style# : 1140263 Name : T Grip Cam Lock S

Usable length : 70~90cm

Material : (Shaft) aluminum alloy (Grip) elastomer (Strap) nylon

All product specifications and design are subject to change without prior notice.
Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

<https://www.montbell.com/>