

## ■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

## ■ 仕様

品番：1141164  
品名：カジタックス スノーシュー 56  
サイズ：長さ56cm  
素材：(フレーム) アルミニウム合金  
(デッキ) 1000デニールポリエステル [PVCコート]  
(クリート) SK5炭素鋼 (ハーネス) エラストマー  
(テープ) ナイロン、ポリエステル

品番：1141165  
品名：カジタックス スノーシュー 46  
サイズ：長さ46cm  
素材：(フレーム) アルミニウム合金  
(クリート) SK5炭素鋼 (ハーネス) エラストマー  
(テープ) ナイロン、ポリエステル

## ■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont·bell

共通取扱説明書

# カジタックス スノーシュー シリーズ

## Kajitax Snowshoes Series

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

ただし、本説明書は本製品の基本的な使用方法を示すものであり登山、クライミングの安全システムを解説するものではありません。安全な条件のもとで十分な練習を行い、正しい使用方法を習得してください。


なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

## ■ 特長

本製品はカジタックスアイゼンを装着したまま着脱できるカジタックスアイゼン専用のスノーシューです。積雪量や雪質に応じて様々な状況の雪面が存在する日本のフィールドに適しています。斜面を下る際には、かかとで直接地面をとらえることができるため、アイゼンの後爪が利きやすく、安定した歩行が可能です。また、アイゼンがなくても本製品だけで装着できます。

※カジタックス・アイゼン本体は別売です。

## ■ 各部の名称

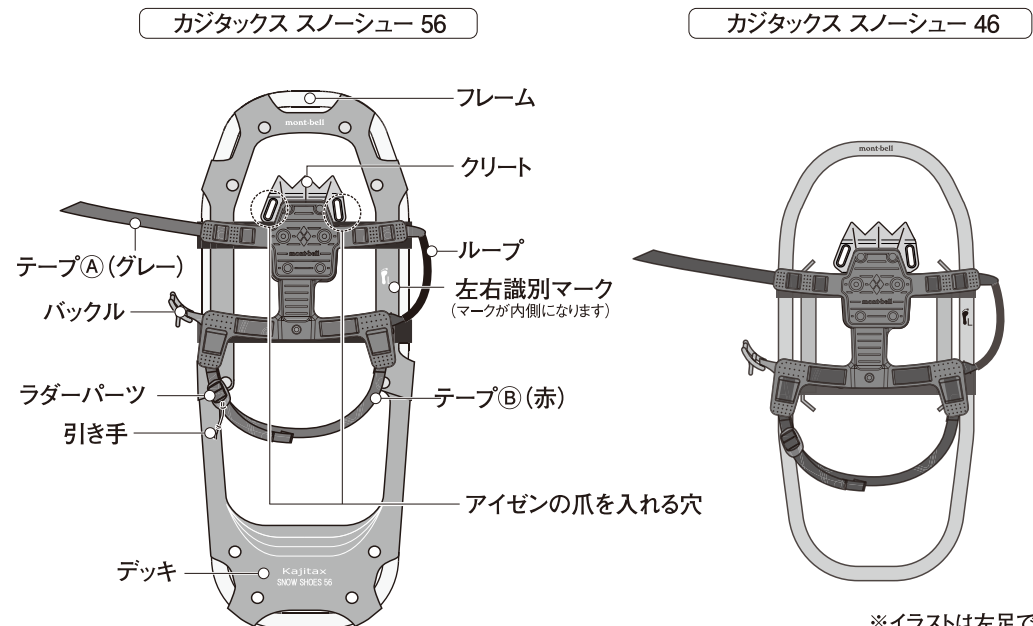

※イラストは左足です。

■ 安全上の注意 必ずお読みください

⚠ 危険

人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

○登山は常に潜在的な危険をはらんでいます。たとえ用具の正しい選択、使用、お手入れ、保管を行なっても傷害や死亡事故などに至る危険性を完全に排除することは出来ません。個人の責任において登山を行ってください。(株) モンベルでは本製品の誤った使用に起因する損害や傷害、死亡事故に対していかなる責任をも負いません。

⚠ 警告

場合により人が死亡または重傷を負う可能性が想定される内容です。  
軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 使用中にはゆるみや不具合が生じていないかを時々確認してください。ゆるみや不具合が発生すると本来の性能を発揮できない恐れがあります。
- 本製品は登山用のスノーシューです。その他の用途には使用しないでください。
- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に保護能力が発揮できない恐れがあります。
- 使用前には毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合には直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- クリートの底についた雪や雪の固まりは常に取り除いてください。放置すると爪が効かず、本来の制動力を発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

⚠ 注意

人が傷害を負ったり物的損害の発生が想定される内容です。

- 靴とカジタックス・アイゼン（別売）と組み合わせて使用する場合と、靴単独で使用する場合は本製品への装着方法が異なります。装着方法を良くお読みいただき、正しく装着してください。
- 本製品を使用する際は十分に歩行練習などを行ってください。本製品を装着していないときに比べ引っ掛けて転倒する可能性が高くなります。
- 本製品へのアイゼンの装着が確実に行われていないと、アイゼンがぶれて、デッキを踏み抜く恐れがあります。
- 本品は雪上での使用を目的としています。雪上以外で使用すると爪が折れ曲がったり、フレームが傷ついたり破損することがあります。

■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。  
異常が見られた場合は使用しないでください。

- ☐ フレームやクリート部に亀裂や変形などがいないか
- ☐ テープにほつれなどがいないか    ☐ リベットが外れていないか
- ☐ 靴底に雪や土が付いていないか
- ☐ デッキはサイズに合わせて調整しているか (カジタックス スノーシュー 56のみ)
- ☐ デッキに破れがないか (カジタックス スノーシュー 56のみ)


■ 使用方法 図は左足です。

※本製品は、左右があります。デッキ、あるいはフレームに印字されている左右識別マークが、左右それぞれの内側に来るようにしてください。かかとが収まるようにテープ®は緩めておきます。

- アイゼンとの装着時 カジタックス・アイゼンLXT-12を例に説明しています。  
※あらかじめアイゼン（別売）を靴に装着してください。アイゼンの装着方法はアイゼンの取扱説明書をご覧ください。  
※アイゼンとの着用時には靴やアイゼンに付着した雪や土をよく取り除いてください。


・対応カジタックス・アイゼン(別売)と対応サイズ

表内のサイズはカジタックスアイゼンのサイズとアイゼン本体のジョイントバーに刻印された数字です。(右図参照)  
※2016年以前のモデルには対応しません。  
※カジタックスアイゼン以外のアイゼンは対応しません。  
※下記以外のアイゼンは装着できません。(サイズによっては下記アイゼンも対応しません。詳しくは下記の対応サイズをご覧ください。)  
※最新の情報はホームページまたはカスタマー・サービスまでお問い合わせください。

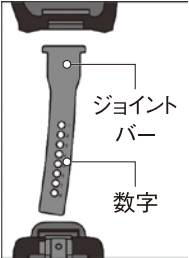

カジタックス アイゼン	カジタックス スノーシュー 56		カジタックス スノーシュー 46	
	サイズ	対応	サイズ	対応
LXF-12 #1141154 LXF-12ワイド #1141153 LXB-12 #1141151 LXB-12ワイド #1141152	S/M全て+M/Lの1 M/Lの2～5 M/Lの6～8	○(デッキカット不要) ○(デッキカット必要) ×(非対応)	S/M全て M/L全て	○ ×
LXT-12 #1141149 LXT-12ワイド #1141150	S/M全て+M/Lの1～5 M/Lの6～8	○(デッキカット不要) ○(デッキカット必要)	S/M全て+M/Lの1～4 M/Lの5～8	○ ×
LXT-10 #1141147 LXT-10ワイド #1141148	S/M、M/L全て	○(デッキカット不要)	S/M全て+M/Lの1～7 M/Lの8	○ ×


- ①アイゼンの2番目の爪をクリートの2カ所の穴に差し込みます。その際、アイゼンの爪がしっかりと奥まで差し込まれているか確認してください(図A)。

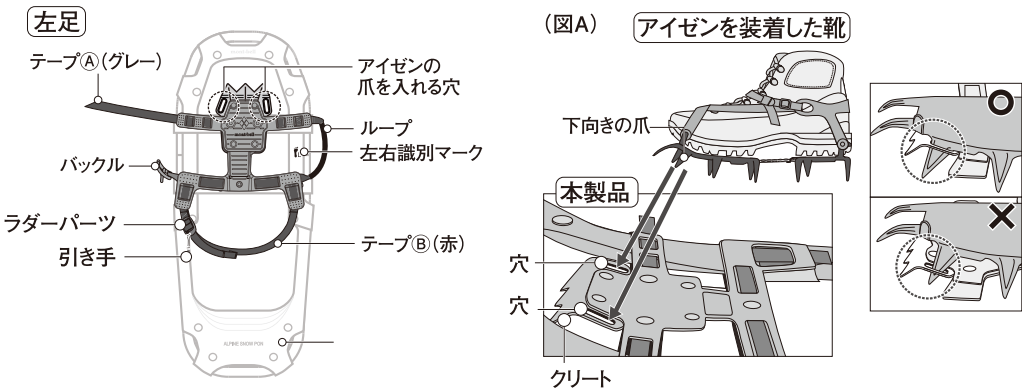


## ・デッキサイズの調整(カジタックス スノーシュー 56のみ)

※カジタックス スノーシュー 56はアイゼンの大きさ(P.3の対応表でデッキカット必要なアイゼン)に応じてお客様ご自身でデッキ部分をカットしていただく仕様になっています。必ずフィールド(山など)に行かれる前に下記の手順で調整してください。デッキを適切にカットしないと、靴とデッキが干渉し転倒など思わぬ事故を招く恐れがあります。


※カジタックス スノーシュー 46はこの調整は必要ありません。

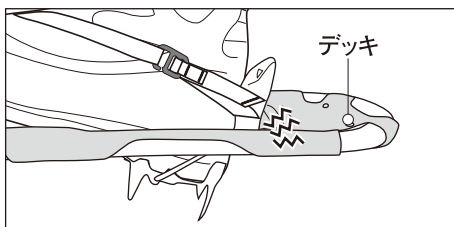


①アイゼン、靴をセットしたカジタックス スノーシュー 56のかかと部を押し、デッキ下に潜り込ませます。上図のようにアイゼンのビンディング部などがデッキに干渉する場合、デッキのカットが必要となります。

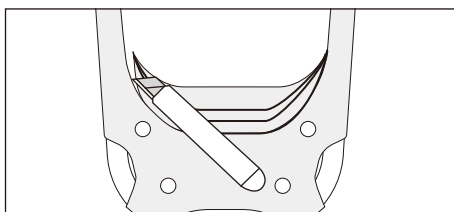

③良く切れるカッターナイフを用意し、ラインに沿って切ります。その際、デッキ生地の切断面がギザギザにならないようにご注意ください。引き裂き強度が落ちる恐れがあります。

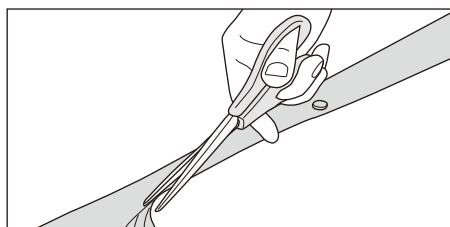


②干渉しないラインを決め、カットのきっかけをハサミで入れます。

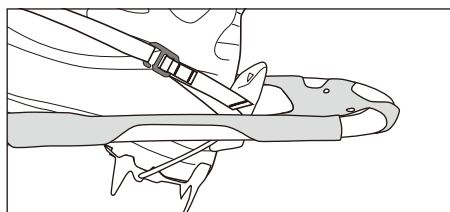

④もう一度アイゼン、靴を装着して、ブーツやアイゼンのビンディングがデッキと干渉しないか確認してください。


②テープ①をループに通して折り返し(図B)、バックルに通します(図C)。

(図B)

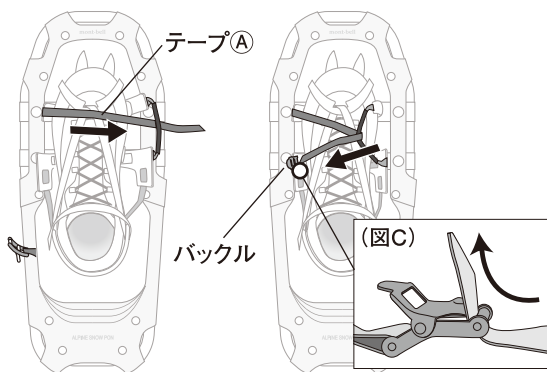


③バックルに通したテープ①を十分引き締め(図D)、甲部分を固定した後、余ったテープはバックルの穴に通してください(図E)。

(図D)

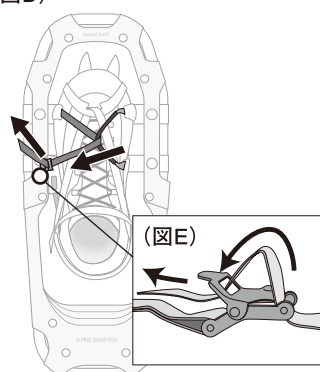

## ・テープの長さ調節

テープの長さはバックルから約6~7cm出るように切ってください。図のように斜めに切るとバックルに通しやすくなります。切断後は切断面をライターなどで溶かして固めてください。その際やけどにご注意ください。

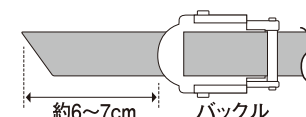

④かかと側のテープ⑧が最も短くなる位置でテープを締めて固定します(図F)。


(図F)

最も短くなる位置で固定する




⑤○部分がしっかりと靴に密着しているか確認します(図G)。かかと側に回したテープ⑧が上下に動くようであれば、④をやり直してください(図H)。


(図G)

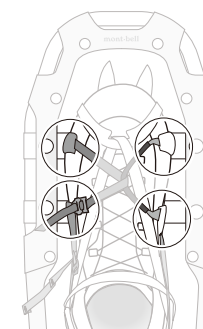

(図H)

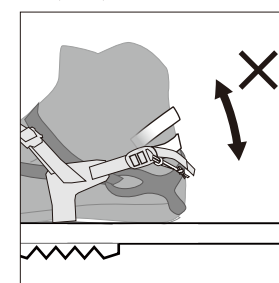

⑥取り外す際は、テープ⑧のラダーパーツに付いた引き手を矢印方向に引いてゆるめ、上記の②~⑤を逆の手順で行ってテープ①を開放してください。

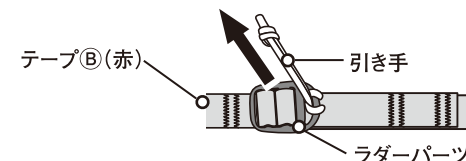

## ○靴のみでの装着時

アイゼンを使用せず、靴のみで着用する場合は、①の手順を行わずに、装着してください。



アイゼンを使用しない場合は簡易的なスノーシューとしてご使用してください。急峻な地形での使用はしないでください。

## ■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- ご使用後は水洗いをして泥などを落として乾燥させた後、さびを防ぐためクリート部に市販の防錆油等を塗布してください。
- テープやバックルなどにキズや破損等がないかを確認してください。
- テープの末端がほつれてきた時はライターなどで溶かして固めてください。

## ■ 保管方法

- 火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。
- 保管場所は直射日光の当たらない風通しの良い場所を選んでください。

## ■ 廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#	: 1141164	Style#	: 1141165
Name	: Kajitax Snowshoes 56	Name	: Kajitax Snowshoes 46
Size	: 56cm [22 inch]	Size	: 46cm [18 inch]
Material	: (Frame) aluminum	Material	: (Frame) aluminum
	(Deck) 1000-denier polyester [PVC coating]		(Cleat) carbon steel
	(Cleat) carbon steel		(Harness) elastomer
	(Harness) elastomer		(Strap) nylon, polyester
	(Strap) nylon, polyester		

mont-bell  
User's Manual

Kajitax Snowshoes Series

Kajitax Snowshoes Series

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.


The manual covers the basic use of this product, but not outdoor safety. It is the user's responsibility to be prepared for potential hazards in outdoor activities and to use the product safely.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

Depending on the intensity of snowfall and snow quality, these snowshoes can be attached and detached easily while wearing Kajitax Eisen crampons (sold separately). Ideal for terrains where various snow conditions exist. The heels move unrestrictively, providing secure grip when descending slopes. Can also be worn without Kajitax Eisen crampons.

Features

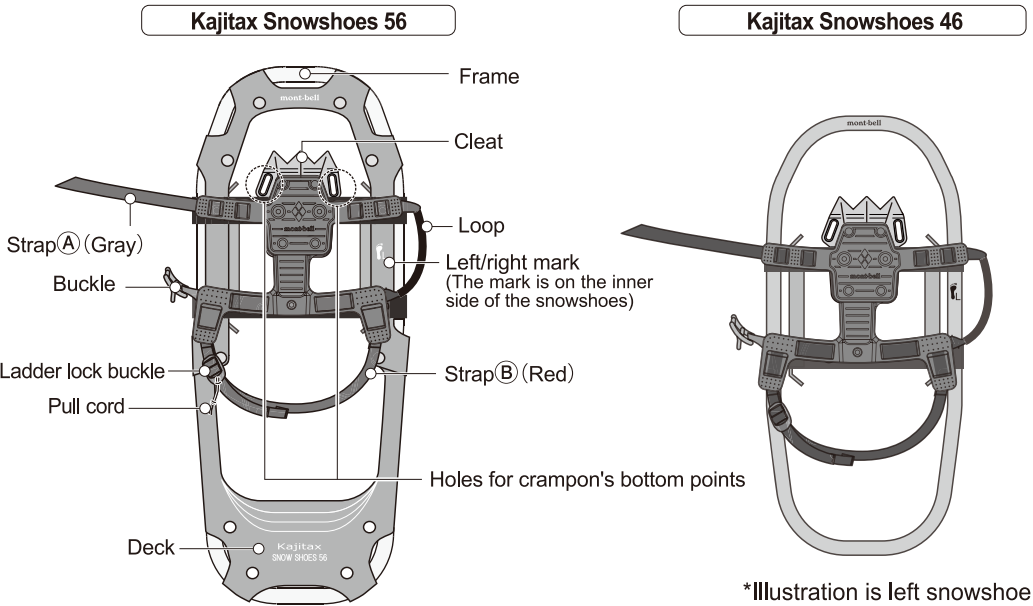

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.



**Safety Warnings!**
Please read carefully.


**DANGER!**
Under certain conditions, use of this product can result in major injury or death.

- Mountaineering is inherently a dangerous activity. Even if this product is used, cared for, and stored correctly, it will not completely eliminate the risk of major injury or death. You are responsible for your own actions and decisions. Montbell Co, Ltd. is not liable for damages or accidents resulting in injury or death due to improper usage.


**WARNINGS!**
Under certain conditions, use of this product can result in injury, death, or property damage.

- During use, periodically check for damage or loosening. Damage and loosening may negatively affect performance.
- This product is made for snowshoeing. Do NOT use this product for any other activity for which it is not designed.
- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- Routinely clear snow from the crampons. Accumulated snow can prevent the crampon's points from performing as intended.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.


**CAUTION!**
Under certain conditions, use of this product can result in injury or property damage.

- Mounting procedures will vary when using with boots and Kajitax Eisen or boots alone. Read instructions thoroughly and mount properly.
- Please practice walking while wearing this product. Without the crampons it may be difficult to walk, increasing the chances of tripping or falling.
- Securely attach crampons to this product. Improper attachment may cause crampons to come off unintentionally.
- This product is meant for use on snow. The points can bend or break and the frames can become damaged when used on surfaces without snow.

**Check before use;**

- ☐ Damage to or deformation of the frames or Cleats
 ☐ Snow or dirt on the shoe soles
- ☐ Frayed or torn strap
 ☐ Properly adjusted decking (For Kajitax Snowshoes 56 ONLY)
- ☐ Broken or damaged rivet
 ☐ Damage or tears on the deck (For Kajitax Snowshoes 56 ONLY)

**Directions**
Illustration are based on left snowshoes.

This product has a left and right. Make sure the left or right mark is on the inner side of the snowshoes. Loosen the strap ⑧ before mounting your foot.

- **Mounting with crampons** Kajitax Eisen LXT-12 crampons are used as an example.

※First attach the crampon (sold separate) to the shoe. For crampon attachment, please refer to the user's manual of crampons.

※When attaching crampons, clear snow and dirt from both shoes and crampons.

- **Compatibility chart with Kajitax Eisen Crampons (sold separately)**


The numbers listed under the size category indicate the digits engraved on the linking bar of Kajitax Eisen Crampons (see right figure).

※NOT compatible with models manufactured before 2016.

※Compatible with Kajitax Eisen crampons ONLY.

※Compatible Kajitax Eisen crampons are listed below.

※For the latest information, please visit our webpage or contact Montbell Customer Service.

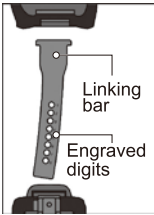


Kajitax Eisen		Kajitax Snowshoes 56		Kajitax Snowshoes 46	
		Size	Compatibility	Size	Compatibility
LXF-12	#1141154	S/M ALL+M/L 1	✓	S/M ALL	✓
LXF-12 WIDE	#1141153	M/L 2~5	✓		
LXB-12	#1141151	M/L 6~8	—	M/L ALL	—
LXB-12 WIDE	#1141152				
LXT-12	#1141149	S/M ALL+M/L 1~5	✓	S/M ALL+M/L 1~4	✓
LXT-12 WIDE	#1141150	M/L6~8	✓	M/L 5~8	—
LXT-10	#1141147	S/M, M/L ALL	✓	S/M ALL+M/L 1~7	✓
				M/L 8	—


- **Optimizing the deck size (For Kajitax Snowshoes 56 ONLY)**

※Depending on the size of your crampons, Kajitax Snowshoes 56 requires you to trim the deck fabric along the printed trim line. Prior to use, please follow the procedure below. Improper sizing may increase the chances of severe accidents, such as tripping or falling.


※This procedure is not required for Kajitax Snowshoes 46.

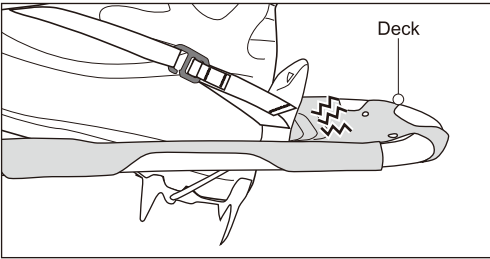


- ① Mount the shoe, with the crampon attached, to this product and sink in the heel. If the crampon touches the deck, it is required to trim the deck.

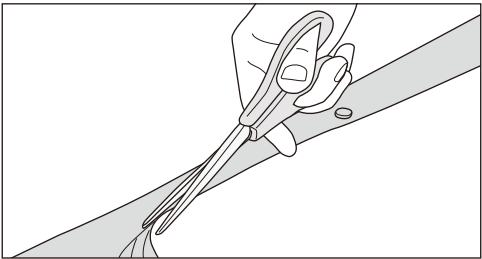

- ② Determine the size of the deck and slit up with a pair of scissors.

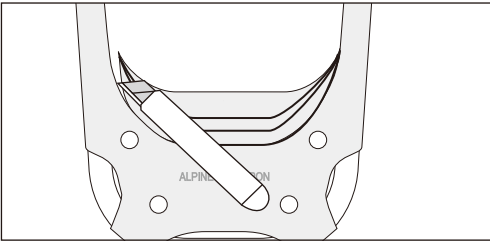


- ③ Cut the deck along the trim line using a sharp cutter, making sure the cut line is clean and smooth. Jagged edges can decrease the strength of deck fabric.

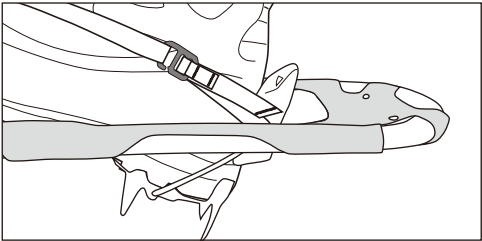


- ④ Mount the shoe again, with the crampon attached, and make sure the crampon does not touch the deck.

❶ Insert the bottom (second) points of the crampons into the designated holes. Make sure that the points are securely in place (see Fig. A).

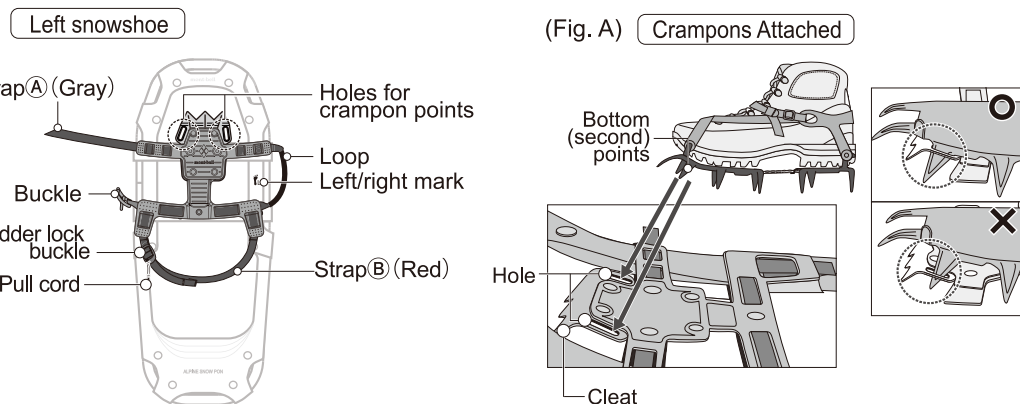


❷ Pass the strap (A) through the loop, pull it back over the instep (Figure B), and pass it through the buckle (Figure C).

❸ After firmly tightening the strap (A) over the instep (Fig. D), pass the excess strap through the hole of the buckle lever (Fig. E).

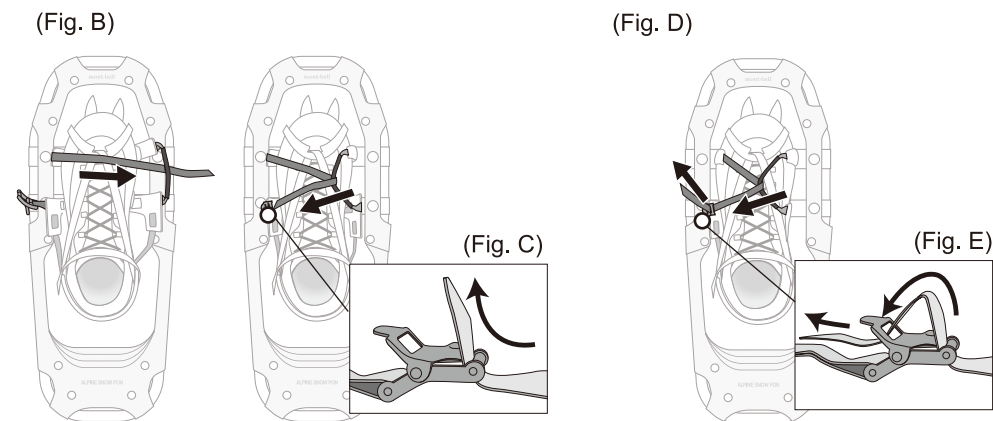


#### ○ Adjusting strap length

Cut excess strap, leaving 6-7cm from the buckle. Cutting the strap diagonally makes it easy to pass the strap through the buckle. Use a lighter or other heat sources to melt the cut ends, preventing fraying. Beware of burns.

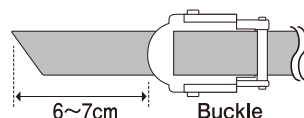


❹ Pull the strap (B) around the heel to secure. Adjust the position of the strap so the length of strap is as short as possible. (Figure F).

❺ Examine the points in (Fig. G), making sure there is no space between the strap and the boot. If the strap (B) on the heel can shift up or down (Fig. H), redo step ❹.

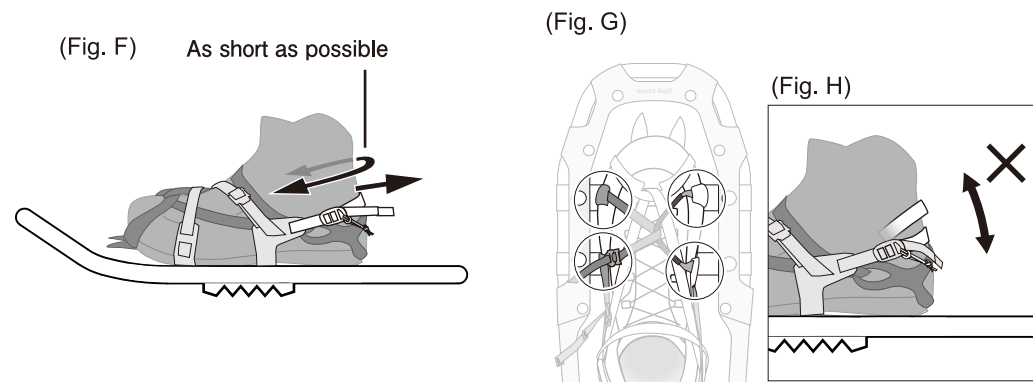

❻ To take off, loosen the strap (B) by pulling the cord on the Ladder lock buckle in the direction of the arrow. Then follow the steps ❷ through ❺ in reverse order to release the strap (A).

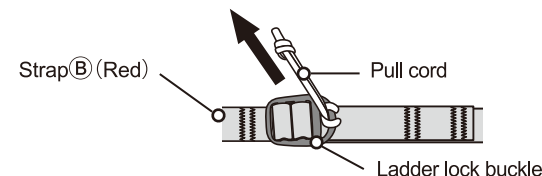

#### ○ Mounting with boots

When mounting with boots alone, omit step ❶ and follow the other steps accordingly.



**When mounting with boots alone, use ONLY as basic snowshoes. Do NOT use on a precipitous terrain.**

#### ■ Care

Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.

- Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool well-ventilated area before applying a corrosion inhibitor.
- Check for damage to the straps and buckles.
- Fix frayed straps by melting the frayed ends with a lighter or other heat sources.

#### ■ Storage

- To prevent deforming and damage, do NOT store near heat sources.
- When storing for an extended period of time, store in a well-ventilated, cool, dry place out of direct sunlight.

#### ■ Disposal

- Please follow local regulations regarding waste disposal.