mont·bell

共通取扱説明書

ステラリッジ® テント本体

Stellaridge Tent Main Body

重要 レインフライは別売です。別途必ずお買い求めください。

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。
なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品は軽量・コンパクト性と強度を兼ね備えたオールシーズン用ドーム型テントです。登山やトレッキングでの使用はもちろん、自転車ツーリングなどにもおすすめです。

■ 各部の名称

テント本体

※写真はステラリッジ® テント2です。
※写真はイメージです。

レインフライ（別売）

テント本体

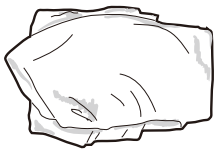

※レインフライは別売です。

ペグ 16㎝ 12本
張り綱 4本
ペグ・張り綱用収納袋

ポール1セット
ポール用収納袋

収納袋
取扱説明書
（本説明書）

ポール応急補修用
パイプ 1本

■ 安全上の注意 必ずお読みください

⚠ 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

◯本製品内や本製品の近くでは、絶対に火気を使用しないでください。火災や一酸化炭素中毒の恐れがあります。

◯出入り口やベンチレーションを常に開け、換気に充分ご注意ください。

◯台風、落雷、強風、豪雨、大雪などの厳しい自然条件の際は、キャンプ場の管理担当者の指示に従い安全な場所に避難してください。

◯河原や河川付近に設営する際は気象条件により突然増水することがあります。設営場所は特に注意してください。

⚠ 警告 場合により人が死亡または重傷を負う可能性が想定される内容です。
軽傷または物的損害が発生する頻度が高いことが想定される内容です。

◯本製品を設営される際は、周囲の環境や気象条件などを充分考慮し、安全を確認してください。

◯出入口は風下側を選び設営してください。強風で本製品が飛ぶ恐れがあります。

◯本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に保護能力が発揮できない恐れがあります。

◯使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。

◯正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

⚠ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

◯稜線上や大木の近く、広い草原では落雷にも注意してください。

◯キャンプ場やキャンプ許可地以外では使用しないでください。

◯設営地はできるだけ平坦で、水はけがよく、危険のない場所を選んでください。

◯使用の際は必ずペグと張り綱で固定してください。砂地や雪上では付属のペグが使用できない場合があります。あらかじめ設営する場所の地面の状態を確認してください。

◯本製品は太陽光線の紫外線により生地が劣化しますので、常設用として使用し続けないでください。

◯硫黄ガスが発生する温泉地等での使用は、生地の劣化を促進させますのでご注意ください。

◯本製品に慣れるため、実際にフィールドへ出かける前に必ず試し張りを行ってください。

◯各パーツや付属のペグには鋭利な部分があります。取扱いにご注意ください。

◯ポールを伸ばす際は周囲に十分に注意してください。近くに人がいないことを確認してください。

◯ポールをフックに吊るしテント本体を立ち上げる際はポールの跳ね返りに注意してください。

◯小さいお子さまにポールの組立てや、ペグ打ちの作業をさせないでください。

◯本製品のレインフライ（別売）の生地は防水加工が施されています。外気との温度差が大きいと、結露によって生地の内側の壁面に水滴がつくことがあります。これは水漏れではありません。本製品の換気を行うことで改善することができます。

◯濡れたままで各パーツ同士（本体とレインフライ）を長時間一緒に置いておくと色が移る恐れがあります。

◯ポールを組み立てる際は、各節を完全に奥まで差し込んでください。奥まで差し込まないとポールが破損する恐れがあります。また、指を挟まないようにしてください。

◯ショックコードを必要以上に伸ばさないでください。ポールが跳ね返った際、衝撃でポール先端が破損する恐れがあります（右図参照）。

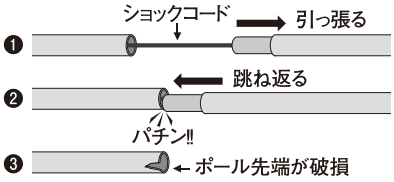

■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。
異常が見られた場合は使用しないでください。

□ポールに亀裂などの破損がないか　□生地に破れがないか

■ 使用方法

○ 組み立て方法

新しいテントに慣れるため、実際にフィールドへ出かける前に、必ず試し張りを行ってください。

1.テント本体の組み立て

❶テント本体をポールフックのついている面を上にして広げます。強風時はテントの四隅をペグで仮留めします（図A）。

（図A）

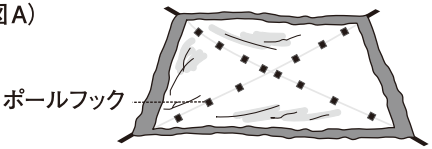

❷ポールの中に通っているショックコード通りにジョイントを接続し組み立てます（図B）。

※ショックコードを必要以上に伸ばさないように注意してください。

※この時ポールは最も長い状態となりますので、周囲に障害物や人がいないかを注意してください。

（図B）

※ポールは奥まで差し込んでください。

1、2型



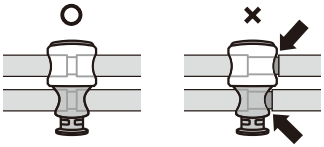

クロスソケットにポールを奥まで差し込んでください。

3、4型

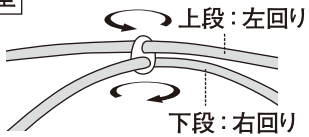

ポールの回転方向に注意してください。反対方向に回転すると破損する恐れがあります。

❸ポールセットを広げ、図のようにテント本体の中央のフックに取り付けてください。その後、ポールの先端をポール受けに入れ、残りのポールフックをポールに固定します（図C）。

※テント天頂部のフックを先に固定せずに組み立てると、ポール先端がポール受けから外れやすくなります。

※ポール受けへのポールの固定は通常は外側で行ってください。雨、結露などで生地の張りが弱まった際は内側で行います。

（図C）

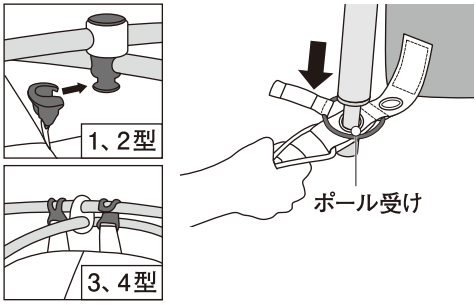

❹テントの本体の各コーナーに設けられたペグ用ループをペグで留めます（図D）。

※ペグで留める際は、ペグをこれ以上打ち込めない深さまで、打ち込んでください。

※付属のペグが使用できないガレ場や雪面では別売のメッシュアンカーやスノーアンカーなどを用いて固定してください。

※フロアの防水性向上や保護のために別売のグラウンドシートもご利用いただけます。（P6 参照）

（図D）

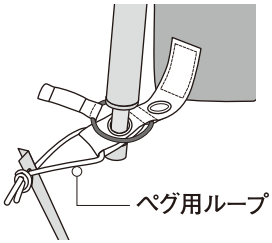

2.レインフライの取り付け

重要 レインフライは別売です。別途必ずお買い求めください。

❶テント本体とレインフライの出入口の位置を合わせ、レインフライをかぶせます。この時、レインフライの張り綱用ループ4カ所の裏側にあるベルクロテープをポールの（図E）の位置に固定します。
※ベルクロテープ取り付け位置はテントの大きさによって異なります。

（図E）

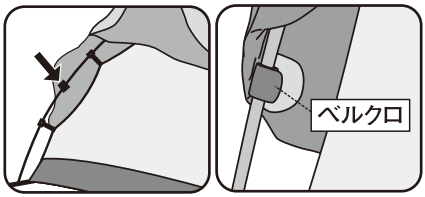

❷レインフライ裾の金属フックをテント本体底部テープのレインフライ取り付けゴムループに掛けます（図F）。ゴムループに付属しているタブを利用すると効率よく作業できます。

（図F）

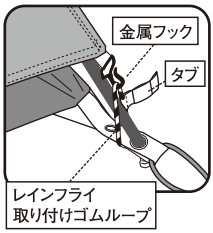

3.張り綱の固定

張り綱は風が吹くことを想定して必ず取り付けてください。レインフライ4カ所の張り綱用ループに付属の張り綱を取り付けます（図G）。付属の張り綱はランナー（自在金具/図H）がついており、ランナーを通したループをペグにかけて長さを調節します（図H）。レインフライ裾部のペグ用ループについてもペグで固定します。なお、このテントにハンマーは付属していません。
※ペグで留める際は、ペグをこれ以上打ち込めない深さまで、打ち込んでください。

（図G）

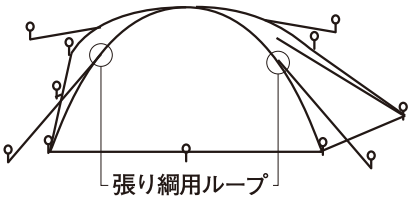

（図H）

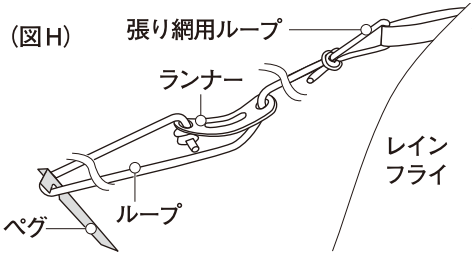

※張り綱用ループに張り綱を結んだ状態で収納することで、次に使用する際に、設営しやすくなります。

○ 収納方法

❶ペグを抜きます。
※ペグを引き抜く際は直接手で握らずに張り綱等を引っ掛けて抜いてください。 ペグには鋭利な部分があり、直接手で握るとケガをする恐れがあります。

❷レインフライを外します。

❸ポールフックをポールから外します。

❹ポールの端をポール受けから外します。その際ポールが跳ね返ると危険ですので、ポールが伸びきるまで手を離さないでください。（P2 注意参照）

❺ポールを収納する場合はクロスソケットからポールを抜き、真ん中から折りたたむようにします（図Ⅰ）。こうすることにより、ショックコード全体に均一にテンションがかかり、ショックコードの寿命を伸ばすことができます。

❻収納袋の幅にテント本体を畳み収納します。その際、ペグは必ずペグ用収納袋に入れてください。そのまま収納すると本体生地を傷つけることがあります。

（図Ⅰ）

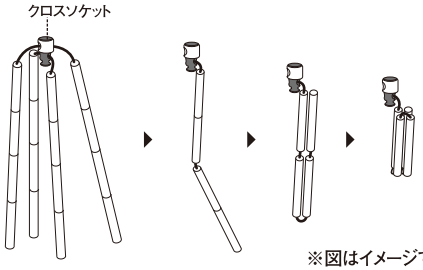

※図はイメージです。
テントによって継ぎ数は異なります。

※本製品の収納袋は、テント本体と別売のレインフライが入る大きさになっています。

○ ポール破損時の対応

本製品のポールが万一破損した際は以下の通り応急処置をしてください。テント設営時に強風や豪雪などの理由によりポールが折れる場合があります。副木を添えて応急処置をすることもできますが、本製品の付属品であるポール応急補修用パイプを用い応急処置も可能です。

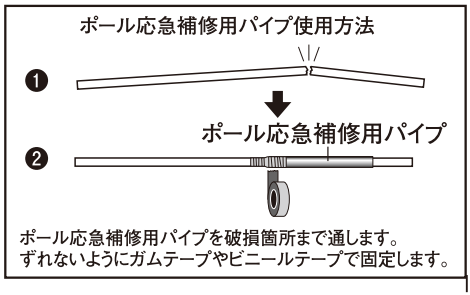

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。
使用後や保管時は以下の点を参考にしてください。

○使用後は、泥汚れなどをあらかじめ水洗いし、陰干しして乾燥後に収納してください。汚れたまま、あるいは濡れたまま長時間放置するとカビの発生する可能性があり、また生地も劣化しやすくなります。
○長期の使用により、レインフライやフロアなどのはっ水性能（水を弾く力）が低下した場合は別売のはっ水スプレーをご使用ください。
○ドライクリーニングや洗濯機による洗濯はできません。生地を傷める恐れがあります。
○ジッパーの動きが固くなりましたら、別売のスムーススライダーやローソクのロウを塗ると回復します。
○ポールやペグは汚れを濡れタオルで拭き取った後、機械油を薄く塗っておきます。ポールは接合部にのみ、塗布します。

■ 保管方法

○濡れたままで各パーツ同士（本体とレインフライ）を長時間一緒に置いておくと色が移る恐れがあります。
○本製品を長期間使用せずに保管する場合は、なるべくゆるくたたみ、直射日光の当たらない風通しの良い場所に保管してください。付属の収納袋は、携行性を重視しているため、きつめにたたまないと入らないので使用を避けてください。
○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

◯本製品の誤った使用方法によるもの　◯間違ったお手入れ、保管方法、経年変化による素材劣化
◯乱暴な取り扱いによるもの　◯その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ オプション（別売）

本製品は下記の別売のオプションを利用することができます。　※ 2018年以前製造のモデルには対応しません。

ステラリッジ® テント1・2・3・4、トレール1・2共通

●**ステラリッジ® テント1・2・3・4、トレール1・2 レインフライ※**
防水性、防風性を高める専用のレインフライです。

●**グラウンドシート ドーム1・2・3・4**
本体フロア生地の耐久性を高めるシートです。

●**テントマット ドーム1・2・3・4**
適度なクッション性を持ち、地面の冷えを遮る中敷き用マットです。

●**オプショナルロフト ドーム用**
天井部分のスペースを有効利用するためのネットです。

●**メッシュアンカー**
付属のペグが使用できない河原やガレ場でのテントの固定に使用します。

●**スノーアンカー**
付属のペグが使用できない雪上でのテントの固定に使用します。

ステラリッジ® テント1・2・3・4

ステラリッジ®1・2・3・4 スノーフライ※

ステラリッジ® テント2

ステラリッジ®テント2 エクステンドレインフライ※

■ 仕様

※図中の単位はcmです。

◯寸法

◯ ステラリッジ®テント 1
#1122814



◯ ステラリッジ®テント 2
#1122815

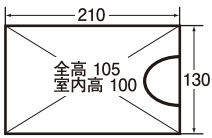

◯ ステラリッジ®テント 3
#1122816

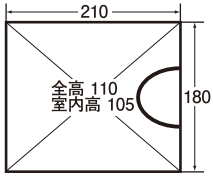

◯ ステラリッジ®テント 4
#1122817

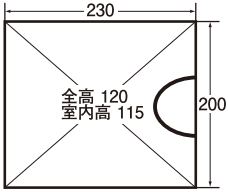

◯ ステラリッジ®テント トレール1
#1122823



◯ ステラリッジ®テント トレール2
#1122824

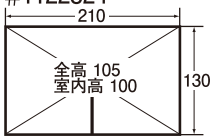

◯素材

◯キャノピー：15デニール・ナイロン・リップストップ［はっ水加工］
◯フロア：30デニール・ナイロン・リップストップ［耐水圧1,500㎜ウレタン・コーティング］
◯ポール：アルミニウム合金（ポール径）φ8.5㎜（ステラリッジテント 1,2、トレール 1,2）、φ9.6㎜（ステラリッジテント3,4）

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社モンベル　本 社　〒550-0013 大阪市西区新町2-2-2　モンベルホームページ　https://www.montbell.jp/
商品についてのお問い合わせはカスタマー・サービスまで　Tel. 06-6531-3544　フリーコール：0088-22-0031

44-6469-2512

mont·bell

User's Manual

Stellaridge Tent Main Body

Stellaridge Tent Main Body

Attention This product does not include a rainfly. A rainfly MUST be purchased separately.

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.
If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Description

Featuring an ultralight and compact design, this dome tent is developed for all-season use and offers excellent performance for mountaineering, multi-day hikes, and bicycle tours.

■ Components

Tent

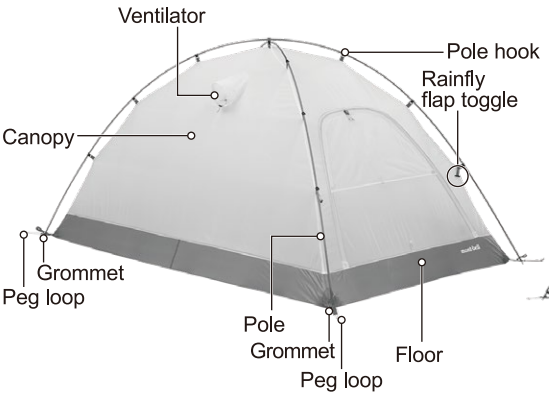

Rainfly (sold separately)

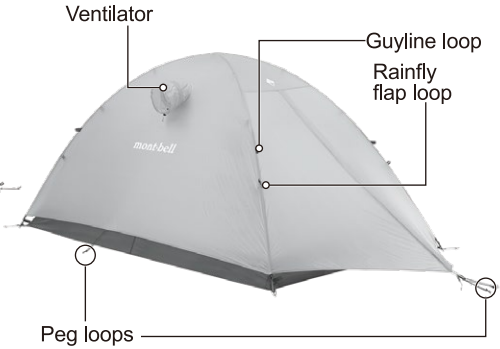

*Product illustrated is Stellaridge Tent 2.
*Illustration. Actual product may vary.

Tent

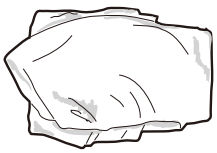

*Rainfly sold separately.

12x 16cm pegs
4x Guylines
Stuff sack for pegs and guylines

1x Pole set
Stuff sack for poles

Stuff sack
User's manual

1x
Pole repair sleeve

■ Safety Warnings Please read carefully.

⚠ DANGER! Under certain conditions, use of this product can result in major injury or death.

- ○NEVER place a flame source in or near the product. May result in fire or carbon monoxide poisoning.
- ○Ventilate the tent at all times by keeping ventilators or tent door(s) open.
- ○Follow campsite instructions for evacuation and safety procedures when encountering harsh weather conditions such as typhoons, lightning, strong winds, heavy rain or snow.
- ○When setting up camp on riverbeds or near rivers, take special care as water levels can suddenly rise due to weather conditions.

⚠ WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.

- ○When selecting a site to pitch, check the safety of the surrounding area and be aware of weather conditions.
- ○When pitching this product, place its entrance downwind. Be aware this tent can be blown away by strong winds.
- ○Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- ○Prior to each use, check the tent's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- ○Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

⚠ CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- ○Be cautious of lightning strikes on ridges, near large trees, and in open fields.
- ○Only pitch tents in areas designated for camping.
- ○When selecting a campsite, choose a flat area with good water drainage and free of hazards.
- ○When pitching this product, always secure it with pegs and guylines. The included pegs may not be suitable for use on sand or snow. Check the ground conditions at the campsite in advance.
- ○Ultraviolet rays from the sun may deteriorate the product's fabric. Do NOT leave this product outside for extended periods or permanently.
- ○Use in hot spring areas or places exposed to sulfur gas may accelerate the deterioration of the fabric.
- ○Before using the tent for the first time, be sure to practice pitching the tent at home to familiarize yourself with the tent and its features.
- ○Be careful when handling pegs or tent parts as they have sharp edges.
- ○When assembling the poles, make sure the area is clear and be careful of other people in the area.
- ○When attaching the poles to the tent, be careful of recoil.
- ○Do NOT allow children to assemble the poles or stake pegs.
- ○The fabric of the rainfly (sold separately) has a waterproof finish. If there is a large temperature difference between the outside air and the inside of the tent, condensation may cause water droplets to form on the inner surface of the canopy. This is not a leak and can be reduced by ventilating the tent.
- ○**If left wet with the rainfly (sold separately) for extended periods, product color may transfer.**

- ○When assembling the poles, make sure that all sections are fully inserted. Otherwise, the poles may be damaged. Be careful not to pinch your fingers while handling them.
- ○Do NOT pull the shock cord more than necessary. Recoil can damage poles as seen in the figure to the right.

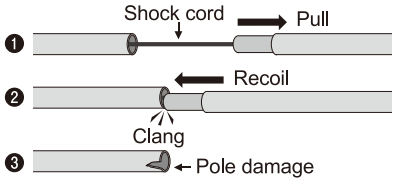

■ Prior to use, inspect this product for:

Stop using immediately if you notice any irregularities.

☐Cracks or damage to the poles.

☐Tears or damage to the tent fabric and rainfly.

■ Directions

○ Setting up the tent

Before using the tent for the first time, be sure to practice pitching the tent at home to familiarize yourself with the tent and its features.

1. Pitching the tent

❶Spread the tent on the ground with pole hooks facing up. If there are strong winds, temporarily stake the tent with pegs (Fig. A).

(Fig. A)

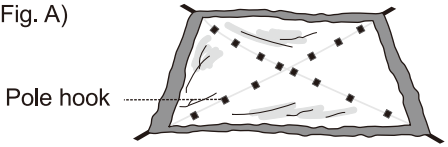

❷Assemble the poles (Fig. B).

*Do not pull the shock cord more than necessary.

*When assembling the poles, make sure the area is clear and be careful of other people in the area.

(Fig. B)



*Fully insert pole sections.

Stellaridge Tent 1&2

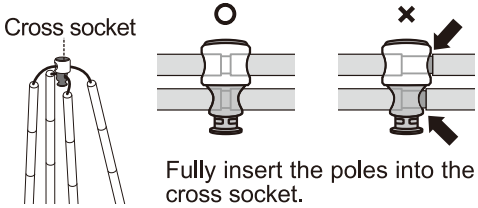

Fully insert the poles into the cross socket.

Stellaridge Tent 3&4

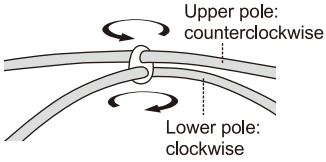

Be careful NOT to rotate the poles in wrong directions. May cause damage.

❸Place the pole set over the tent and attach the tent's center hook(s) to the pole(s) first. Insert the pole ends into the grommets, then attach the remaining pole hooks to the poles (Fig.C).

*If the center hook(s) is not fixed first, the pole ends may easily come off the grommets when pitching the tent.

*Insert the pole ends into the outer grommets under normal conditions. In wet conditions, when the fabric may sag, insert the pole ends into the inner grommets.

(Fig. C)

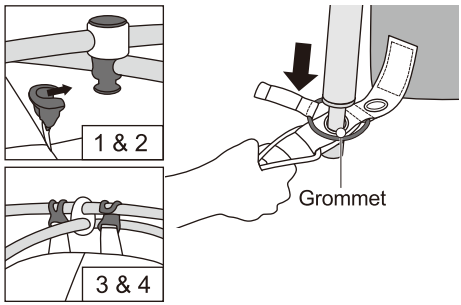

❹Stake each corner of the tent using the peg loop (Fig. D).

*Stake pegs as deep as possible.

*When staking a tent in rocky or snowy conditions, consider using the Mesh Anchor or Snow Anchor (sold separately).

*To protect the tent floor and improve water resistance, consider using a footprint (sold separately; see p.6).

(Fig. D)

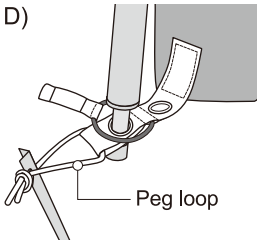

2. Attaching the rainfly

Important Rainfly is NOT included and must be purchased separately.

❶Align the entrances and place the rainfly over the tent. Attach the rainfly to the poles using the hook-and-loop straps behind the guyline loops (Fig. E).

*The strap attaching positions vary depending on the size of tent.

❷Hook the metal hooks at the corners of the rainfly onto the elastic rainfly loops on the tent body (Fig. F). Using the pull tabs will help hooking.

(Fig. E)

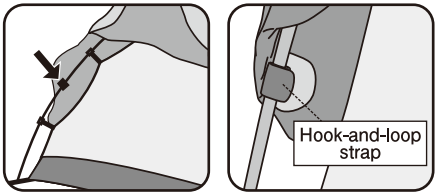

(Fig. F)

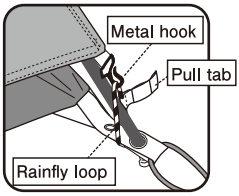

3. Staking the Tent

Always secure the tent with guylines and be ready for unexpected windy conditions. Fix the guylines to the guyline loops on the edges of the rainfly (Fig. G). Use the runners to tension the guylines to staked pegs (Fig. H). Stake the bottom of the rainfly with pegs. Please note that a hammer for staking pegs is not included with this tent.

*Stake pegs as deep as possible.

(Fig.G)

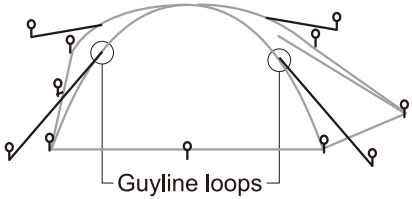

(Fig.H)

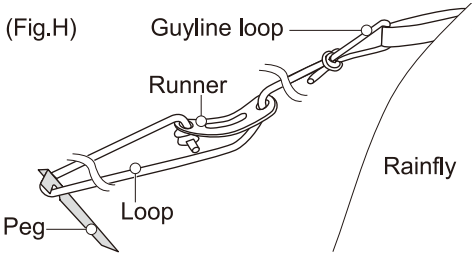

*Consider leaving the guylines attached to the guyline loops at all times for quick and easy setup.

○ Taking down the tent

❶Hook something around the pegs, such as the guylines, to pull pegs out of the ground.

*Do not pull out pegs with your bare hands. Edges may be sharp enough to cause injury.

❷Remove the rainfly.

❸Remove the pole hooks from the poles.

❹Remove the pole ends from the grommets. Firmly hold the poles until the poles are no longer at tension as there is a risk of injury due to recoil.

❺When taking apart the poles, remove the pole sections from the cross socket and fold the poles starting at the middle (Fig. I). This extends the lifespan of the shock cord by placing an equal amount of tension over the entire length of the cord.

❻Fold the tent into the same width as the stuff sack for easier storage. To prevent damaging the tent's fabric, store pegs separately in their own stuff sack.

*The tent's stuff sack is large enough to store the tent and the rainfly (sold separately) together.

(Fig.I) Cross socket

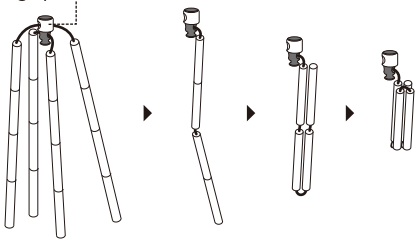

*Illustration. Actual number of sections may vary.

○ Emergency pole repair

In case a pole breaks, use the following procedure to temporarily fix the pole. The tent poles may break due to strong winds or heavy snow. Although it is possible to use a splint to temporarily fix the pole, we recommend using the pole repair sleeve that is included with this product.

Emergency pole repair guide

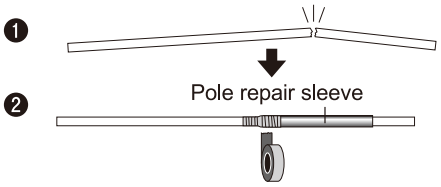

Slide the pole repair sleeve over the area that has been damaged. To prevent the pole repair sleeve from moving, fix it in place using tape.

■ Care

○Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool, well-ventilated area. If stored wet or soiled, mold can grow and the fabric can start to prematurely deteriorate.

○Over time, the water-repellent treatment on the tent floor and rainfly will deteriorate. To restore water repellency, reapply a water-repellent spray (sold separately).

○Do NOT dry clean or wash in washing machine. This can damage the tent's fabric.

○If zipper movement becomes stiff, use the Smooth Slider (sold separately) or candle wax to restore functionality.

○Use a damp cloth to wipe off dirt from poles and pegs, then apply a small amount of machine oil. For poles, only lubricate the joints.

■ Storage

○**If left wet with the rainfly (sold separately) for extended periods, product color may transfer.**

○When storing for an extended period of time, fold loosely and store in a well-ventilated, place out of direct sunlight. Avoid using the included stuff sack for storage, as it is designed to hold the product tightly for portability.

○Do NOT place the product in a place where it will be exposed to high temperatures such as near a fire or heater. May cause deformation or damage.

■ Disposal

○Follow local rules and regulations for proper disposal.

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ Accessories (sold separately)

The following accessories are available for use with this tent. *Not compatible with the models made in or prior to 2018.

Stellaridge Tent 1-4 and Stellaridge Tent Trail 1-2

- **Stellaridge Tent 1- 4 and Stellaridge Tent Trail 1-2 Rain Fly***
  Provides rain and wind protection.
- **Footprint for Dome 1, 2, 3 and 4**
  Protects the tent's floor fabric.
- **Tent Mat Dome 1, 2, 3 and 4**
  Offers moderate cushioning while insulating against the cold from the ground.
- **Optional Loft Dome**
  Effectively utilizes the tent's ceiling space to provide easy-access storage.
- **Mesh Anchor**
  An anchor for use in rocky terrain.
- **Snow Anchor**
  An anchor for use in snowy terrain.

Stellaridge Tent 1-4

Stellaridge 1-4 Snowfly*

Stellaridge Tent 2

Stellaridge Tent 2 Extended Rain Fly*

■ Specifications

◯Dimensions

*Units are in centimeters.

◯ Stellaridge Tent 1
#1122814



◯ Stellaridge Tent 2
#1122815

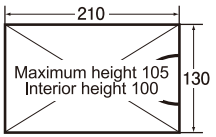

◯ Stellaridge Tent 3
#1122816

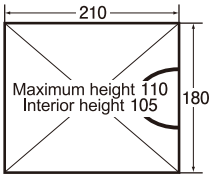

◯ Stellaridge Tent 4
#1122817

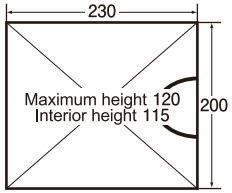

◯ Stellaridge Tent Trail 1
#1122823



◯ Stellaridge Tent Trail 2
#1122824

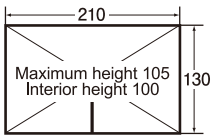

◯Materials

◯**Canopy:** 15-denier nylon ripstop (water repellent finish)
◯**Floor:** 30-denier nylon ripstop (urethane coated, water resistance 1,500 mm)
◯**Poles:** aluminum alloy
Pole diameter: ϕ8.5mm (Stellaridge Tent 1, 2 and Stellaridge Tent Trail 1, 2) ϕ9.6mm (Stellaridge Tent 3, 4)

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.
2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
https://www.montbell.com/

44-6469-2512